



SW1630 0920
Supersedes NEW


SUMP AND SEWAGE PUMPS
UTILITY PUMPS
SUBMERSIBLE WELL PUMPS
JET PUMPS
WATER FILTRATION




ACCESSORIES and REPAIR PARTS



ACCESSORIES Well Pumps

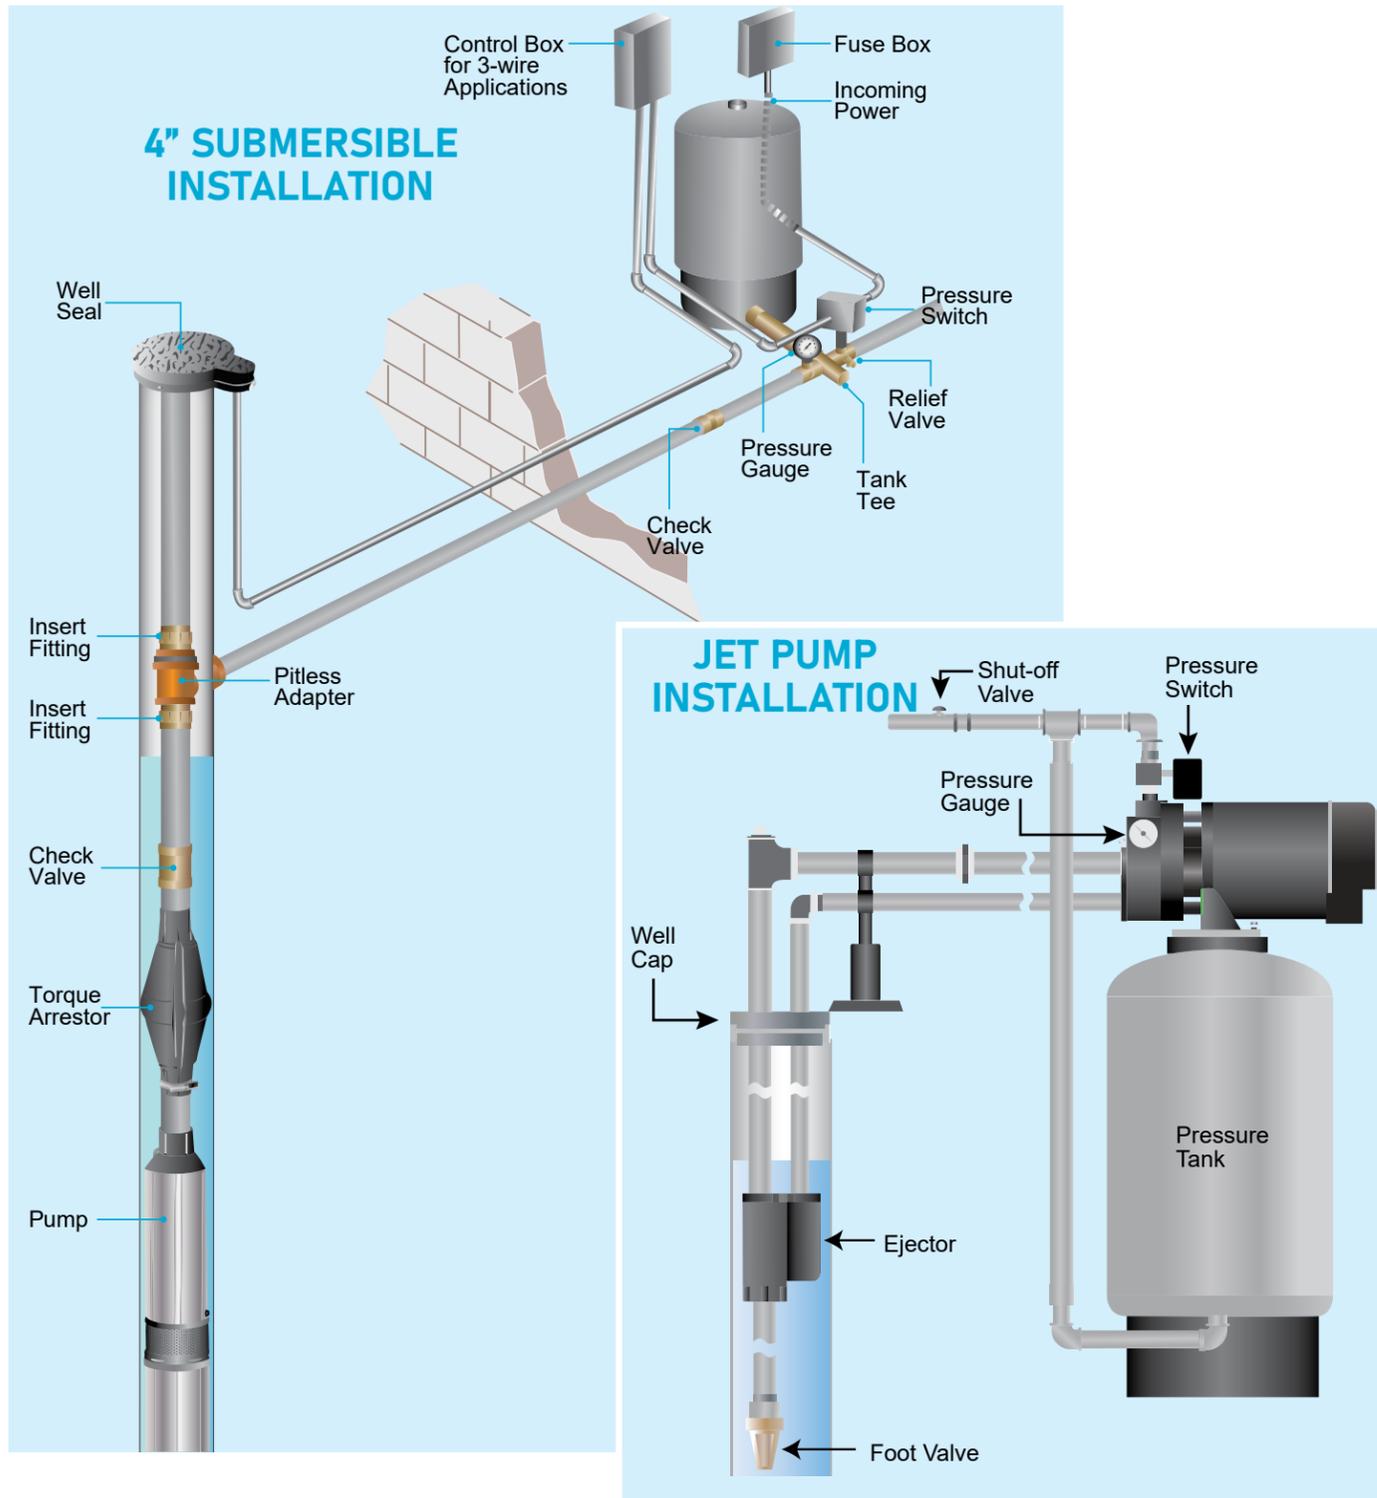

ACCESSORIES Sump Pumps

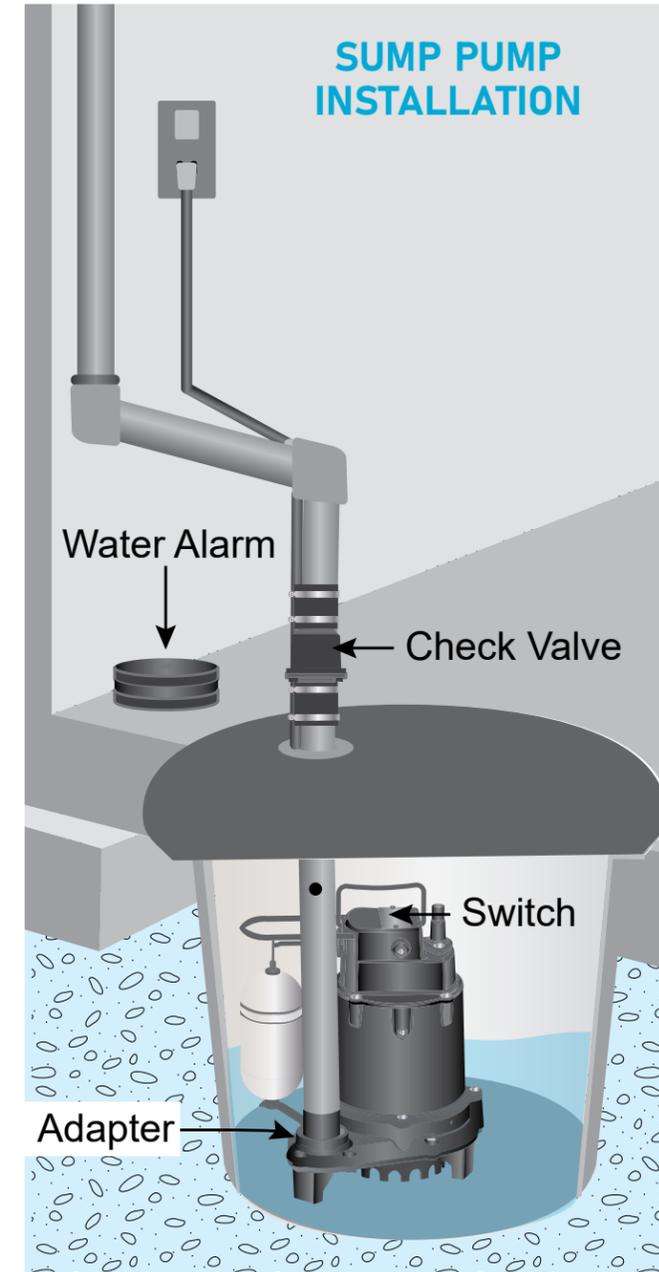



ACCESSORIES

Sump and Sewage

SUMP AND SEWAGE PUMP CHECK VALVES

These sump pump check valves are designed to work with submersible or pedestal sump pumps. They keep water from returning to the sump basin when the pump turns off.



P/N	Description	UPC
148155	Universal Sump Pump Check Valve 1-1/4" or 1-1/2"	054757 101329
148102	Univ. Sump Pump Check Valve with Boot	054757 098827



P/N	Description	UPC
024772	Sump Pump Check Valve 1-1/4" Threads	054757 097608
148101	Sump Pump 2-in-1 Plastic Check Valve 1-1/2" Threads	054757 098810

Sewage pump check valves can handle up to 2" solids to keep liquids moving away from the sewage basin when the pump shuts off.



P/N	Description	UPC
024785	Sewage Check Valve 2"	025757 097738



ACCESSORIES

Sump

SUMP PUMP ACCESSORIES - Helps prevent water damage and complete system installation

A high water alarm can be used with a sump pump, in a laundry room or anywhere flooding may be an issue. Attaches to sump discharge pipe or sits on the floor where flooding may occur.



P/N	Description	UPC
148138	High Water Alarm	054757 100643

Use the nylon bushing to connect 1-1/2" pumps to 1-1/4" discharge pipes. Rubber boot works with 1-1/4" or 1-1/2" connections.



P/N	Description	UPC
024784	Nylon Bushing 1-1/2" x 1-1/4"	054757 097721
148103	Rubber Boot Connector 10"	054757 098834

This hose kit fits on any sump pump with a 1-1/4-in female NPT or 1-1/2-in female NPT discharge. This hose kit can also fit on utility pumps that come with a 1-1/4-in insert (barb) adapter.



P/N	Description	UPC
020123	24 ft. Hose Kit 1-1/4" hose kit with 1-1/2" and 1-1/4" adapters	054757 053932

These heavy-duty basins are designed for fast and easy sump pump installation. 18" x 30" polyethylene basin with steel cover. 2" vent and discharge.



P/N	Description	UPC
S1031	4" Cast iron inlet hub	054757 053383
S1035	4" Plastic inlet hub	054757 054083



ACCESSORIES Sump

SUMP PUMP REPAIR PARTS - Restores pumps to new condition

This dual float replacement switch can be used with any non-automatic utility or sump pump using a piggy-back plug.



P/N	Description	UPC
148104	Dual Float Replacement Switch	054757 098841

The universal design of this piggyback mechanical float switch allows it to be used with 1/3 and 1/2 HP submersible sump pumps. The sump pump switch kit is designed to work with model 3SEHL.



P/N	Description	UPC
024779	Mechanical Float Switch Submersible Sump	054757 097677
148139	Sump Switch Kit for 3SEHL	054757 100667

These column sump pump repair parts can extend the life of a pump.



P/N	Description	UPC
024773	Replacement Switch Column Sump Pump	054757 097615



P/N	Description	UPC
148142	Float Rod Guide Column Sump Pump	054757 100711
025430	Float Stop (2) Column Sump Pump	054757 101183

ACCESSORIES Utility



SMALL UTILITY PUMPS - For easy pumping applications around the home and yard

These portable utility pumps come in a variety of styles, including drill-powered, hand-powered and battery-powered



P/N	Description	UPC
024491	Universal Drill Pump Kit	054757 096274
024786	Drill Pump 1/4"	054757 097745



P/N	Description	UPC
148006	Hand Shaker Pump	054757 098452
148004	Battery Utility Pump	054757 098438

UTILITY PUMP REPAIR PARTS - Restores pumps to new condition

Because the HPP360 portable utility pump uses a brush-type motor, those brushes need to be replaced every 400 hours. Use this kit to keep the pump in good working order.



P/N	Description	UPC
024794	Brush Kit for HPP360	054757 097820

Models HPP360 and HPP12V can be repaired if needed using this gasket and impeller kit.



P/N	Description	UPC
024793	Gasket & Impeller Kit for HPP360 and HPP12V	054757 097813



ACCESSORIES

Well

PRESSURE GAUGES - Monitors system pressure

1/4" male NPT connects to any tank cross or 1/4" pump pressure port



P/N	Description	UPC
024771	Pressure Gauge 100 PSI	054757 097592
024789	Pressure Gauge 200 PSI	054757 097776

BRASS AND PLASTIC CHECK VALVES - Keeps water system primed

Use these brass check valves in jet pump or submersible pump applications to prevent backflow to the pump once it shuts off. Can be installed in a horizontal or vertical position.



P/N	Description	UPC
024775	Brass Check Valve 3/4" LLC	054757 097639
024769	Brass Check Valve 1" LLC	054757 097578
024776	Brass Check Valve 1-1/4" LLC	054757 097646
148115	Brass Check Valve 1-1/2" LLC	054757 098957

Corrosion-resistant plastic check valves can be used in jet pump or submersible pump applications to prevent backflow to the pump once it shuts off. Can be installed in a horizontal or vertical position.



P/N	Description	UPC
148146	Plastic Check Valve 3/4"	054757 101039
148147	Plastic Check Valve 1"	054757 101046
148148	Plastic Check Valve 1-1/4"	054757 101053

ACCESSORIES

Well



BRASS AND PLASTIC FOOT VALVES - Keeps debris out of well system and helps maintain prime

Use these brass foot valves the end of a well pipe to filter out debris and help prevent backflow to the pump once the pump shuts off.



P/N	Description	UPC
024768	Foot Valve 1" x 1-1/4" LLC	054757 097561
148116	Brass Foot Valve 3/4"	054757 098964
148117	Brass Foot Valve 1"	054757 098971
148118	Brass Foot Valve 1-1/4"	054757 098988
148119	Brass Foot Valve 1-1/2" LLC	054757 098995

Corrosion-resistant plastic foot valves install at the end of a well pipe to filter out debris and help prevent backflow to the pump once the pump shuts off.



P/N	Description	UPC
148149	Plastic Foot Valve 3/4"	054757 101060
148150	Plastic Foot Valve 1"	054757 101077
148151	Plastic Foot Valve 1-1/4"	054757 101084



ACCESSORIES Well

PRESSURE SWITCHES - Turn water systems on and off automatically

1/4" male NPT connects to most jet pumps



P/N	Description	UPC
024766	Pressure Switch 20/40 - 1/4" male NPT	054757 097547
024767	Pressure Switch 30/50 - 1/4" male NPT	054757 097554
024781	Pressure Switch - Low Water Cutoff 20/40 - 1/4" female NPT	054757 097691

RELIEF VALVES - Relieves water system pressure safely

Protects tank systems from pressure buildup. Recommended for all pressure tank installations.



P/N	Description	UPC
024777	Pressure Relief Valve 1/2" LLC	054757 097653
148120	Pressure Relief Valve 3/4"	054757 099008

DISCHARGE TEE - Connects water system components

For use with jet, centrifugal and lawn sprinkler pumps.



P/N	Description	UPC
148123	Galvanized Discharge Tee 1"	054757 099039

ACCESSORIES Well



TANKTEES - Connect water system components

1/4" and 1/2" ports accept pressure switch, pressure gauge, relief valve and snifter valve.



P/N	Description	UPC
148121	Tank Tee 4" X 1"	054757 099015
024795	Brass Tank Tee 10" LLC	054757 097837
148122	Tank Tee 14" X 1-1/4"	054757 099022

WELL CAP - Keeps debris from entering well systems

For use where a water-tight seal is not needed. Fits 5-in inside diameter well casing. Cast aluminum construction.



P/N	Description	UPC
148134	Well Cap 5-9/16" OD	054757 099763

WELL ADAPTERS - Connect pump to piping.



P/N	Type	Well Size	Drop Pipe	Suction Pipe	Pressure Pipe	UPC
127025	Right Angle	2"	1"	1-1/4"	1"	054757 002114
129723	Right Angle	2"	1-1/4"	1-1/4"	1"	054757 008567
129719	Straight	2"	1"	1-1/4"	1"	054757 003067
129720	Straight	2"	1-1/4"	1-1/4"	1"	054757 008550



022961	Vertical Well Adapter for use with vertical jet pumps	054757 081133
--------	---	---------------



ACCESSORIES Well

ADAPTERS, INSERT COUPLINGS AND CONNECTORS - Connects flexible and PVC pipes

Brass barbed end to securely connect polyethylene pipe to metal threaded pipe.



P/N	Description	UPC
148107	Steel Female Adapter 1"	054757 098872
148125	Brass Insert Coupling 3/4" NL	054757 099053
148126	Brass Insert Coupling 1" NL	054757 099060



P/N	Description	UPC
148105	Brass Male Adapter 3/4" NL	054757 098858
024787	Brass Male Adapter 1" Thread x 1" Barb	054757 097752



P/N	Description	UPC
148109	Brass Male Adapter Long 1-1/4" NL	054757 098896
024788	Brass Male Adapter 1-1/4" Thread x 1-1/4" Barb	054757 097769



P/N	Description	UPC
148110	Brass Male Adapter/Reducer 1-1/4" x 1"	054757 098902
148111	Brass Male Rope Adapter 1-1/4" NL	054757 098919



Pitless adapter fits 4-in to 8-in well casing

P/N	Description	UPC
148106	Pitless Adapter 1" LLC	054757 098865

ACCESSORIES Well



DRIVE CAPS - Used when driving a new well

Protects points and drive pipe threads while driving.



P/N	Description	UPC
148124	Cast Iron Drive Cap 2"	054757 099046
148131	Cast Iron Drive Cap 1-1/4"	054757 099121

DRIVE COUPLINGS - Connects well point to drive pipe.

Made from no-lead galvanized steel or PVC plastic for long life



P/N	Description	UPC
024780	Steel Drive Coupling 1-1/4"	054757 097684
148114	Steel Drive Coupling 2"	054757 098940
148152	Plastic Coupling 1-1/4"	054757 101091
148153	Plastic Coupling 1-1/2"	054757 101107
148154	Plastic Coupling 2"	054757 101114

DRIVE POINTS - STEEL AND PLASTIC - Used when driving a new well

Steel well points for tough driving conditions. Plastic points for sandy conditions.



P/N	Description	UPC
148130	Well Point 1-1/4" X 60"	054757 099107
148132	Steel Well Point 2" x 26"	054757 099114
148133	Steel Well Point 1-1/4" x 36"	054757 099756

P/N	Description	UPC
148135	Plastic Well Point 1-1/4" x 48"	054757 100353
148136	Plastic Well Point 2" x 48"	054757 100360
148144	Plastic Well Point 1-1/4" x 36"	054757 101015
148145	Plastic Well Point 1-1/4" x 60"	054757 101022



ACCESSORIES Well

SPLICE KIT, TORQUE ARRESTOR, CABLE PROTECTOR

Heat splice kit provides water-tight connections for submersible installations. Torque arrestor protects submersible pumps from damage when pump starts and stops.

P/N	Description	UPC
024778	Heat Splice Kit 3W/G	054757 097660
024783	Torque Arrestor	054757 097714

Cable guard prevents power cable from rubbing against the inside of the well casing.

P/N	Description	UPC
024770	Cable Protector	054757 097585

AIR VOLUME CONTROL - For galvanized tank installations.

Ensures proper balance of air and water in tank.

P/N	Description	UPC
148113	Deep Well Air Volume Control	054757 098933

AIR VALVE - For shallow and deep well pumps systems using galvanized tanks.

Provide method of injecting and holding air pressure in galvanized water systems.

P/N	Description	UPC
148112	Brass Air Valve 1/8" LLC	054757 098926



ACCESSORIES Well

FITTINGS KIT - For submersible and jet pump installations

Submersible pump fittings kit for Air-E-Tainer and other contained air tanks.



P/N	Description	UPC
023281	Fittings Package - Includes tank cross, pressure switch, pressure gauge, 1/2" pressure relief valve, 1" check valve and 1/2" boiler drain	054757 083878

Pressure fittings kit works with jet pumps and jet pump pressure regulators.



P/N	Description	UPC
148128	Pressure Fittings Kit - Includes two 1/4" elbows, one 1/8" elbow and plastic tube	054757 099084

JET PUMP REPAIR PARTS - Restore jet pumps to new condition



P/N	Description	UPC
024774	Flow Control Kit for JHU Series and 1463 jet pumps - 3/4" x 3/4"	054757 097622
024792	Ejector Gasket Kit for JHU Series and 1463 jet pumps	054757 097806

P/N	Description	UPC
148141	Service Kit 3/4 HP Used on ES07S, JHU07	054757 100681
148143	Service Kit 1/2 HP Used on ES05S, JHU05	054757 100782



ACCESSORIES Water Filtration

FILTERS - Keep debris out of well systems

Sediment filter helps make water system components last longer. For indoor or outdoor use.



P/N	Description	UPC
148127	Sediment Filter - includes adapters for most PVC pipe.	054757 099077

Canal / lake screen used to filter debris in irrigation pump applications.



P/N	Description	UPC
148129	Canal / Lake Screen 3" x 22-1/2" PVC	054757 099091

SRC MASTER PACKAGING



starwatersystems.com

H2O Pro Customer Service
Toll Free Help Line
800-742-5044